

## iPackRx<sup>®</sup> Unit Dose Packager

featuring m:Print 4.0 Software



### 4 Package Sizes

No toolkit required to change package sizes. Choose a label template according to desired package size in the software, and you can package in 4 different sizes:

- 2" x 2"
- 2" x 1.67"
- 2" x 1.43"
- 2" x 1.25"



### intelliCount<sup>®</sup> Automated Feeder

Unattended packaging ability with our patented pill feeder, guaranteed to save time.



### No Crush Technology

Our patented features reduces the rate of crushed pills in each unit dose package and eliminates empty packages between runs.



### iPack® Rx Specifications:

Packaging Speed	48 packages per minute
Dimensions	14"H x 40"L x 18"D
Weight	114 pounds
Electrical	115VAC, 60Hz, 320VA & 230VAC, 50Hz, 320VA
Operating Space	32"H x 52"L x 20"D

### m:Print® Specifications:

#### 2-D Bar Codes

Included support for Data Matrix, Aztec, as well as most popular linear bar codes.

#### Custom Label Templates

Design custom templates for roll, sheet, and flag labels with a few clicks of a mouse.

#### Flexible Reporting

Microsoft SQL Server Reporting Services means robust reports with advanced data filtering capabilities.

#### Any Label. Any Printer.

If you can design it, m:Print will print it on any Windows® supported printer.


#### Microsoft SQL Server

Robust enterprise-class database makes sure your data stays secure and safe.

#### Print In Color

Use color coding to increase label accuracy and patient safety. Print pill images on labels to help reduce medication administration errors.

*\* Available in 64-bit & 32-bit*

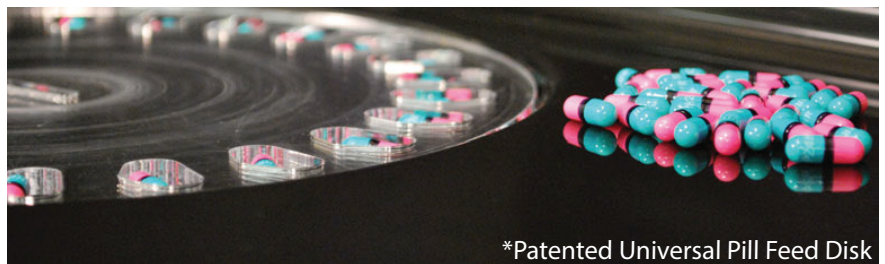

\*Patented Universal Pill Feed Disk